EKEBOL

Tough - Reliable - Built to Last

Coding Elsema Remote Controls – Winch/Tilt and Slide

1. Open the remote control receiver box (usually mounted to the chassis) and locate the red coding cable with 2 male plugs.
2. On the circuit board, locate the coding socket and two upright pins marked CC.
3. **With ignition switch turned ON and PTO engaged short out the two pins marked CC using end of coding cable.**
4. Open battery cover of Hand piece and locate coding socket.
5. Connect hand piece to circuit board using coding cable, lamp on hand piece should glow continuously.
6. Press button one (winch in) and two (winch out) on the handpiece simultaneously until lamp flashes then stops.
7. Unplug cable and press button # 7 (ON/OFF) and test unit. (NOTE. Handpiece must be at least 1.5 metres from receiver to operate properly.)

Upright Pins (circled below) – Refer to Points 2 and 3

Pre-2014

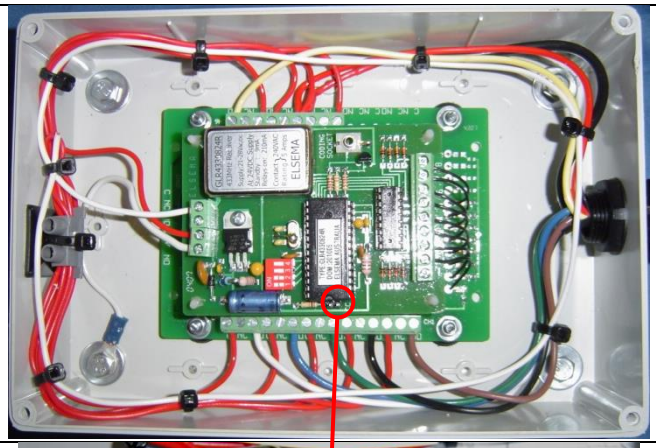

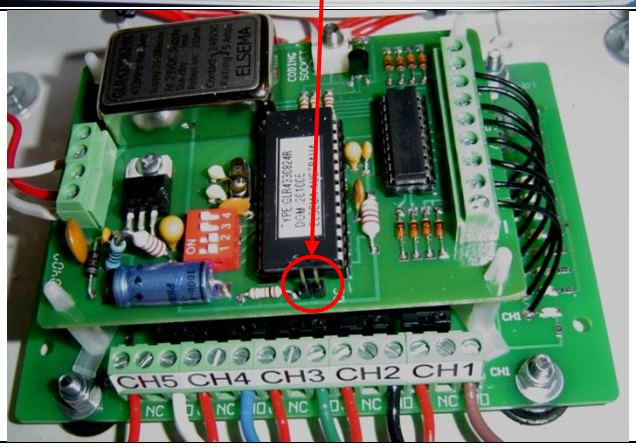

2014

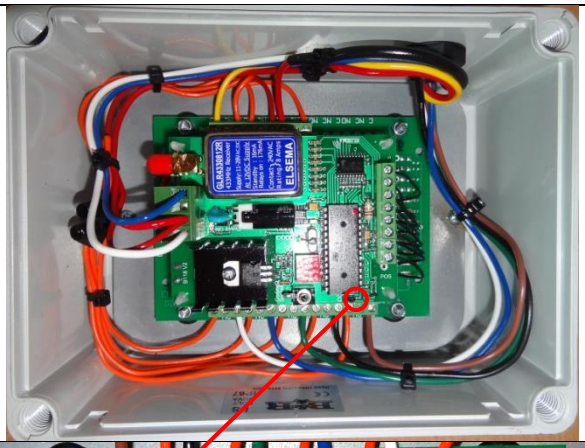

Visit our website: www.ekebol.com for other parts and accessories for your Ekebol.